


1. Start OPC UA Server and copy the connection address




2. If the the Connectivity tab is not available: Activate the Connectivity plugin and restart the application: File menu > Options > Add-on > Connectivity > Enable
3. Change to the Connectivity tab
4. Select OPC UA in Connectivity Configuration dialog and click "Add Server" using the context menu

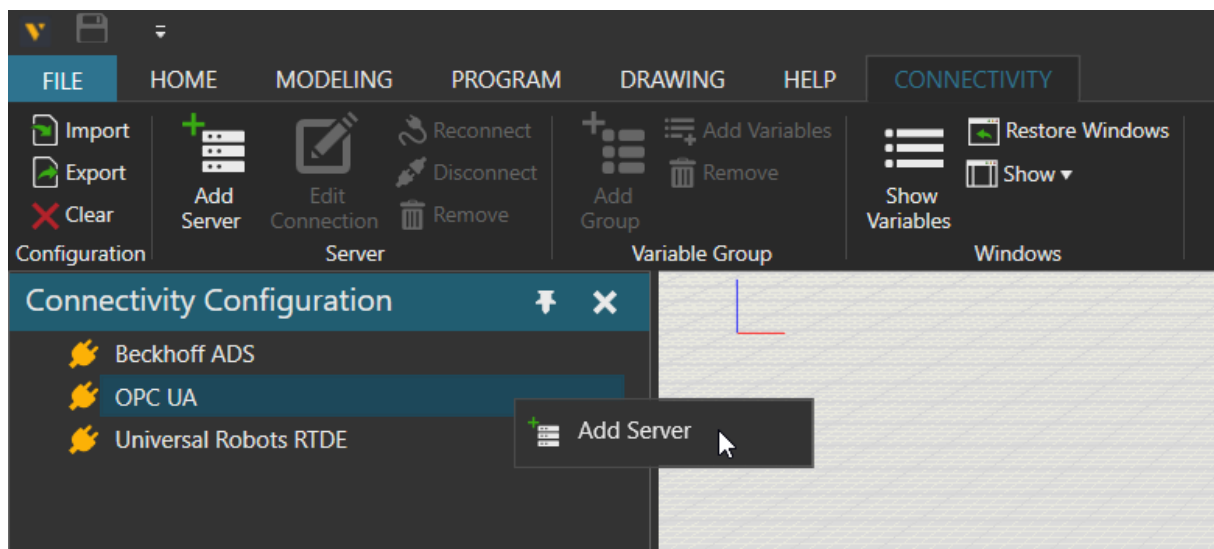

5. Paste the connection address in the server address field on the Edit Connection dialog and press Apply



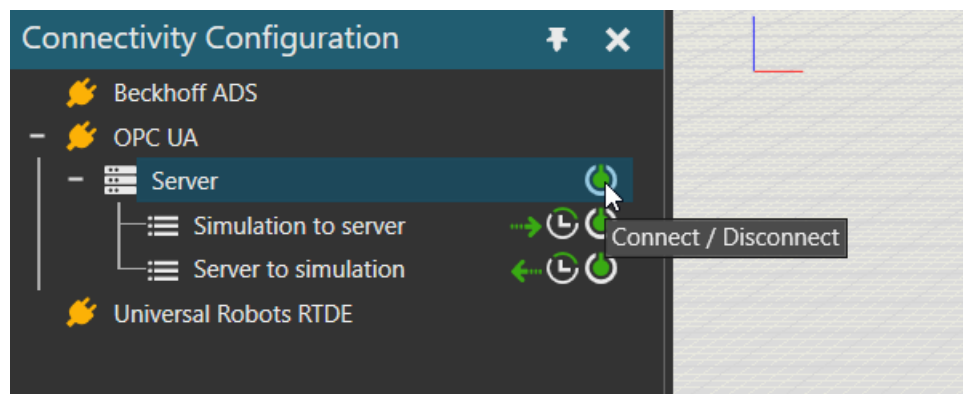

7. Choose a variable group to add variable mappings

